



Acesonic SING-n-SHARE
KM-SSWA PRO PORTABLE MIC
SING • PLAY • RECORD • SHARE

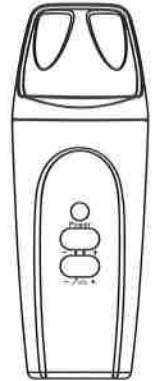

User Manual

Device Layout

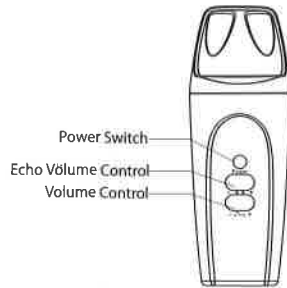

Micro 5 Pin USB Charging
Port & Audio Input



Audio Output 1 Audio Output 2

Initial Settings:

- a. **Preparation of video output device:**
Transfer the video or audio files to the device with the supported file formats (such as .mp3, .3gp, mp4, or .mkv, etc.)
- b. **Preparation of Microphone:**
 1. Charge your microphone by connecting it to your computer via USB cable. You will see a red light power indicator.
 2. Be sure to correctly orient the joining terminals to avoid breakage.
 3. It is recommended to completely charge for a total of 8 or more hours prior to initial usage.
 4. After initial charging, normal charge-time is 4-5 hours.

Connect Mobile phone



Charging

How to use:

- a. Connect the microphone and the video/audio output device using the supplied USB audio cable. The 3.5mm jack connects to the earphone jack of device. The microUSB jack connects to the microphone audio input. Be sure to correctly orient the joining terminals to avoid breakage.
- b. Connect the speaker or earphone to audio output 1 or 2 of the microphone, using the 3.5mm jack.
- c. Switch on the microphone power. You will see the green light power indicator.
- d. Adjust the volume of sound and each effect.

You are now setup to enjoy use of your Sing-N-Share microphone!

Specifications:

Element: Condenser

Sensitivity: 10Mw

Reverberation: Echo Reverberation

Battery: Built-In Lithium-Ion Battery

Charging Power Output: 126dB 1KHz THD 1%

Power Supply: DC5V

Precautions:

- Should any liquid fall onto the microphone or if used for prolonged periods in humid locations or bad weather, please place the microphone in a well-ventilated area and allow for drying of any moisture or humidity.
- Do not expose the microphone to naked flame sources, such as candle light or matches.
- Do not drop or expose microphone to sudden shock or trauma (ie. continuously dropping). Doing so may cause malfunction and/or damage.

Troubleshooting:

Subject No.	Symptom	Cause(s)	Solution(s)
1	There is no light on the power indicator	1. Power switch has not been turned on 2. No power supplied to microphone (battery drain)	1. Switch on the microphone power switch 2. Fully charge the battery
2	There is no sound coming from the microphone	The volume control of the microphone is set to mute	1. Turn off the mute function 2. Increase the volume of microphone
3	There is no echo effect being emitted from the microphone	The volume control of the echo effect is set to mute	1. Turn off the mute function 2. Increase the volume of the echo effect