

front 445mm x 210mm

LIMITED WARRANTY

ENTERMEDIA 1YEAR LIMITED WARRANTY

Thank you for purchasing an Entermidia (ET) product. ET warrants its products against defects in materials and workmanship under generally accepted industry standards for a period of one (1) year for labor and parts from the date of retail purchase. ET's warranty obligations are limited to the terms and conditions set forth below :

TERMS AND CONDITIONS

- If a defect or defects exist, at its option, ET will repair the product at no charge, using new or refurbished replacement parts provided the product does not fall into one of the categories of Section Number 9. "The warranty does not cover as below." Replacement parts are warranted for the balance of the original applicable warranty period.
- To obtain warranty protection, notice of the alleged defects must be given promptly upon discovery and this warranty card bearing the date of purchase, the product's model number with its serial number and other fill-ins must be presented with dated proof of purchase ( Tax invoice / receipt ) to one of our authorized service centers.
- Our decision on all questions with respect to complaints as a result of defects, either materials or workmanship, shall be conclusive.
- In order to ensure that you are covered by the warranty, you should use only genuine ET parts and components such as adaptors, cables provided during installation.
- Entermidia or Authorized Service Centers will repair products under warranty at no charge, given all guidelines and restrictions are followed. Shipping expenses may or may not apply to customer depending on the region. Please contact local service center as provided by ET before sending any units in for repair.
- After warranty period, to have normal service, customers shall bear all costs in shipping the product(s) both ways ( Customers to service centers and Service centers to customers ).
- All returned products must be packaged appropriately, and it is recommended that they be insured or sent by a method that provides for tracking of the package. The recipient ( service center(s) or even ET ) is not responsible for any product that is lost or damaged in transit.
- Please be Advised that the warranty will not be effective and all the costs of both service and shipping in and out shall be born by customer if they purchased the products from other countries outside of the US ( Our authorized service centers can be found in the last page of the manual provided.)
- The warranty does not cover :
  - Defects, damage and breakage resulting from accidents, misuse (breakage, spillage of food / liquid substances that defect the product and parts such as P.C.B, battery leakage and etc.), wrong usage of electrical supply and voltage, abuse, alteration, modification, improper handling/operation, installation, tampering or failure of the purchaser to follow normal operating procedures described in the user's manual.
  - Product subjected to unauthorized disassembly and/or repairs which adversely affect the performance of the product.
  - In case of non-authorized third party engagement.
  - Normal and customary wear and tear, corrosion, rusting or stains.
  - Scratches and damages to the outer surface areas and externally exposed parts that are due to normal customer use.
  - Claims for damaged/missing parts or accessories after 3 days from the original date of goods received.
  - Product which has its serial number removed or altered or made illegible / tampered.
  - If the warranty card is being altered, defaced or erased in any manner whatsoever.
  - The warranty period for a voice coil inside the mic ball, adaptor and cables is 3 months from the date of a retail purchase.
- Any service charge due to the clauses of "The warranty does not cover" will be billed to customers and the service charge will vary depending on each service center in each country. Please consult the service charge with your nearest service center.

If you want to contact our technical "Service Center" close to your area, please refer to our website at " www.entermidia.xyz "

LIMITED WARRANTY	
PRODUCT	CITY / STATE / ZIP
MODEL NUMBER	TELEPHONE
WARRANTY PERIOD	PURCHASE DATE
1 YEAR FROM PURCHASE DATE	DAY / MONTH / YEAR
PURCHASER'S NAME	PURCHASED FROM
ADDRESS	REASON FOR SERVICE

Designed & Supplied by ENTERMEDIA CO., LTD. \*Commercial usage of this device is not allowed.  
 Address : Enter B/D, 157-1, Seongso-ro, Bucheon-si, Gyeonggi-do, Korea 14429 VER.100  
 Tel : +82-32-680-9000 | Fax : +82-32-673-0868 | Website : www.entermidia.xyz

fold

- Quick Start Frequently Asked Questions -

Q My MAGICSING is not working! What should I do?

A Please contact our support center before returning the MAGICSING, and we will do our best to answer your questions

Q I want to use my MAGICSING with computer!

A Sorry, we don't support connecting MAGICSING with PC for now. You can only connect MAGICSING to TV's or PC monitors with HDMI Ports.

Q How can I update the Song List of my MAGICSING?

A Since MAGICSING is a streaming-based karaoke system, you can access the newest Song List with the MAGICSING App.

Q Do I have to pay for the MAGICSING App to use the MAGICSING karaoke?

A You will have access to more features, like the limitless Song List and using your phone as a remote controller when you purchase the MAGICSING App. You can still enjoy MAGICSING'S internal song list without using the MAGICSING App.

Q I want to sing a song with my friends, can I get an extra Microphone?

A Of course you can! wireless microphones for MAGICSING. You can purchase an additional MAGICSING microphone controller and connect up to two microphones to one Base Unit."

fold



MAGICSING Do your thing with MAGICSING!

Let's get started!

- The following Quick Start Guide is for the basic setup and use of your MAGICSING product. More information is available at <http://www.magicsing.xyz/>

Overview

- MAGICSING is one of the easiest and best ways to sing along with great music, play games, watch videos and experience endless hours of enjoyment and entertainment with your family and friends.
- The state-of-the-art streaming karaoke library removes the need to buy more memory chips or CDs to get more music. Now you can get the song you want, when you want it.
- You can also do a number of other things with MAGICSING that extend beyond karaoke, including downloading and using Android™ Apps. (Requires Account with Google™ PlayStore), as well as viewing your photos and videos.

Remember

- You can do lots of things with MAGICSING, so take the time to explore this Quick Start guide, the TV interface and the MAGICSING microphone controller.

BEFORE YOU BEGIN

MAGICSING REQUIRES A WI-FI CONNECTION TO WORK CORRECTLY

- Make sure your internet connection is working and that you have the necessary login information to connect to a wireless network.
- Please follow the instructions carefully. This Quick Start Guide was meant to assist you in using the MAGICSING system quickly and was not meant to address the various ways your internet or internal home network may be configured. If you require further assistance in that matter please refer to our User Guide.

SETUP SUPPORT:


- We can help! If you experience any problems during setup, please contact us at [info@uskaraoke.com](mailto:info@uskaraoke.com), or visit our website at <http://www.magicsing.xyz/>
- The store you purchased the product from cannot provide tech support.

To get started, you will need:

- The MAGICSING Entertainment System.
- Both an HDTV and Internet connection. MAGICSING supports wireless networks.

back 445mm x 210mm

PACKAGE CONTENTS

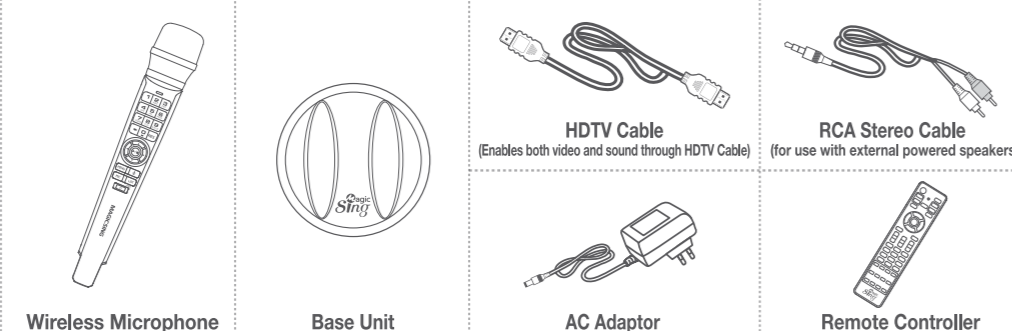


If you find any of the items above missing and/or damaged, please contact the store where you purchased the product from immediately. You may purchase additional Wireless Microphone. One Base Unit can be connected up to two Wireless Microphone at the same time.

Quick Start Guide


To use MAGICSING, you need a TV with HDMI Port. Please follow the steps to start your MAGICSING and enjoy magical moment.

STEP 1 Connect the MAGICSING

- Connect one end of a HDTV cable to Base Unit.
- Connect the other end of the HDTV cable to your TV's HDMI.

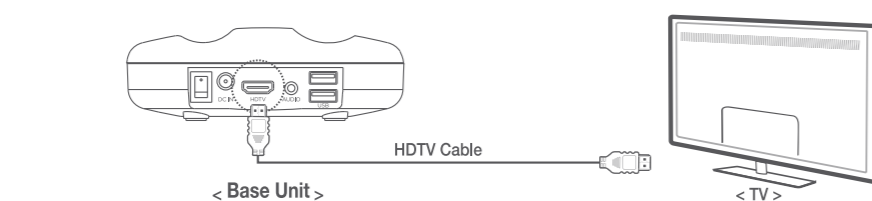


- Plug AC Adaptor to electrical outlet.
- Connect AC Adaptor to Base Unit's input port.

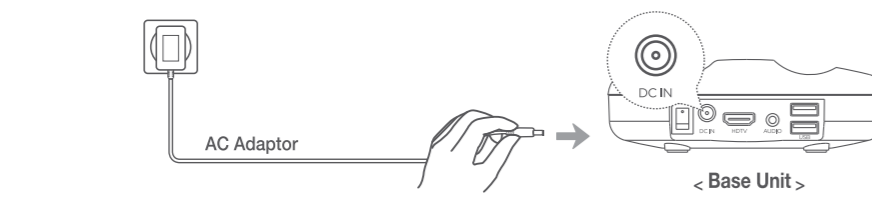

Tip Do you want to use external speakers?

- Connect Base Unit and Speakers with RCA Stereo Cable. Connect Red end of the cable to "Right" Speaker and White end to "Left" Speaker.

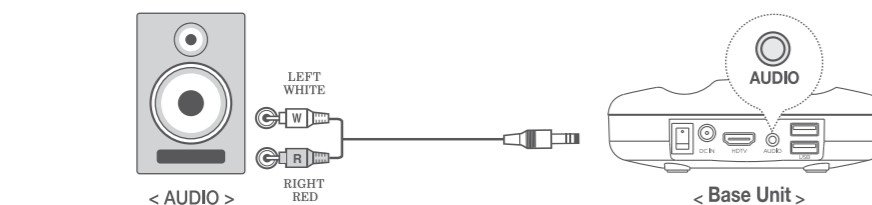


STEP 2 Turn on the MAGICSING

- Turn on the power button on the side of the Base Unit. Please Check the Green LED light.
- Press and turn on the power button on the Wireless Microphone. Please Check the Green LED light.



- Turn on the TV and select the HDMI input that you used to connect to the Base Unit.

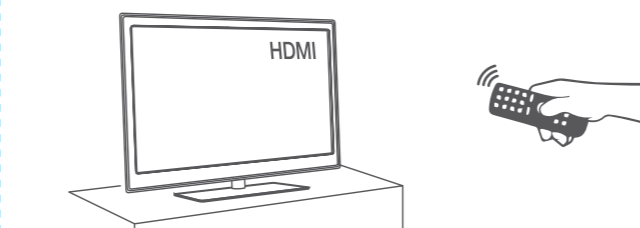

STEP 3 Connecting MAGICSING to Wi-Fi network.

To enjoy MAGICSING's Karaoke function, you need to connect the device with Wi-Fi network. If a MAGICSING is not connected to Wi-Fi network, it will ask you to connect to Wi-Fi network at setting menu.

Wi-Fi setting menu



- Choose the Wi-Fi network you want to connect. The list of Wi-Fi networks menu will be displayed at Setting menu.
- Input password of your Wi-Fi network if required. Once a MAGICSING connects to a Wi-Fi network, it will remember it afterwards.

HOME SCREEN MENU

KARAOKE

Selecting KARAOKE connects you to the MAGICSING online library of over 12,000 free karaoke music selections. These selections contain backing tracks, lyrics and notations for a wide selection of songs and genres that appeal to all ages and music preferences.

You can select songs by first pressing the search button which will present you with the song menu that will appear from the right side of the screen.

- You can select songs by voice (press the Microphone button and say the name of the song or the band's name).
- You can select songs by scrolling up and down using the up and down arrows that surround the green play button on the microphone.
- You can select songs by scrolling left and right by using the left and right arrow keys that surround the green play button on the microphone. MAGICSING only uses quality Karaoke tracks that were created and licensed expressly for Karaoke singers.

Tip Start Singing - Select KARAOKE from main menu

You can select songs from the MAGICSING online library by using the navigation keys on the MAGICSING microphone controller, or by using your voice (press) and saying the name of the song.

SETTING

Selecting SETTING connects you to the MAGICSING settings menu. This menu allows you to set the video size, language, and wireless settings for your MAGICSING. You can navigate these settings with the arrow keys located around the green play button on the MAGICSING microphone controller.

MANUAL

Selecting MANUAL connects you to the MAGICSING user manual. Please refer to this manual for further instructions on the use of your MAGICSING system.

MEDIA

Selecting MEDIA connects you to the MAGICSING network screen that will allow you to connect to the MAGICSING's internal memory, mand the MAGICSING USB port. The MAGICSING USB port connects to your portable hard drive or flash drive device. Once connected, you can navigate and make selections on your media device by using the MAGICSING microphone controller navigation keys.

Connecting MAGICSING with Mobile MAGICSING Application

- You can connect your MAGICSING to Mobile application. Use your phone as extra controller and get access to application's song library.
- Install MAGICSING application to your smart phone. It is available on Apple's App Store or Google's Play Store. Scan the QR code that displayed on TV screen.
- You can subscribe MAGICSING application to use your phone as mobile karaoke as well.



Microphone controller and Remote controller buttons guide

Microphone controller buttons guide

	NUMBER AND TEXT Press these buttons to input character for search.
	BACKSPACE Press this buttons to erase your input or to cancel function you chose.
	RESERVATION Press this button to reserve a song or to cancel reserved songs.
	NAVIGATION AND PLAY Press up, down, left and right buttons to navigate through functions. Press  button to play and stop songs.
	MENU See the function menu bar of the right side screen by pressing this button.
	VOICE SEARCH Search a song by speaking out the name of a song or singer.
	MICROPHONE Adjust Microphone volume.
	LIST / RECORDING Short press displays reserved, favorite and play history song list. Long press starts recording.
	POWER Turn on / off the MAGICSING by pressing this button.

Remote controller buttons guide

	Power		Number / letter input
	Home		Exit / Delete
	Adjust key		Reserve a song
	Adjust tempo		Display reserved, favorite and played song lists
	Adjust male / female key		Add to favorite song list
	Search songs		Cancel reservation
	Menu		Display / Hide musical note
	Echo		ON / OFF scoring function
	Skip prelude or interlude		Change background image
	Adjust Microphone volume		Pause / Resume
	Adjust Melody volume		Instrument setting
	Adjust Music volume		Select song randomly
			Clapping Sound Effect
			Display QR Code to connect with MAGICSING app