


PRODUCT NAME: Retro  
ITEM NUMBER: 25190CLPN

Please consult your electrician for hanging fixture and wiring.

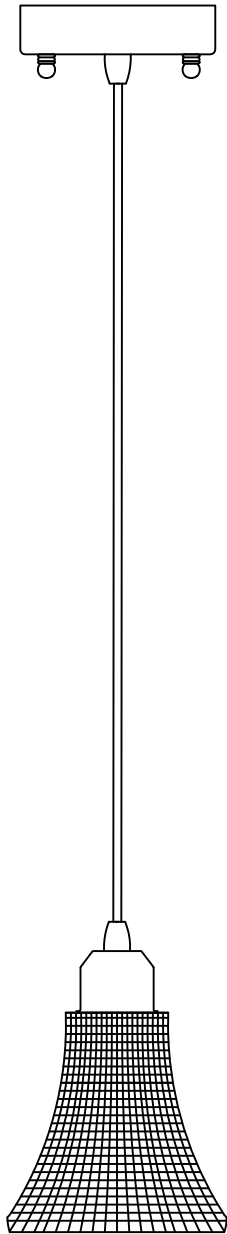

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:

Lutron MACL-153M

Lutron DVL-153P

Lutron SCL-153P


Leviton IPL06-10Z

Leviton 6674-POW


Due to inrush current, wattage should not exceed 150 Watts of product for a 600W dimmer.

8W LED

**IMPORTANT:** Turn off the power at the main fuse or circuit breaker box before starting installation

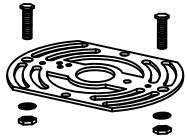

A  
Mounting Bracket




B  
Canopy



C  
Finial




D  
Cup

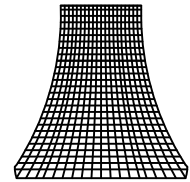


E  
Glass

Locate all hardware & components before discarding packaging

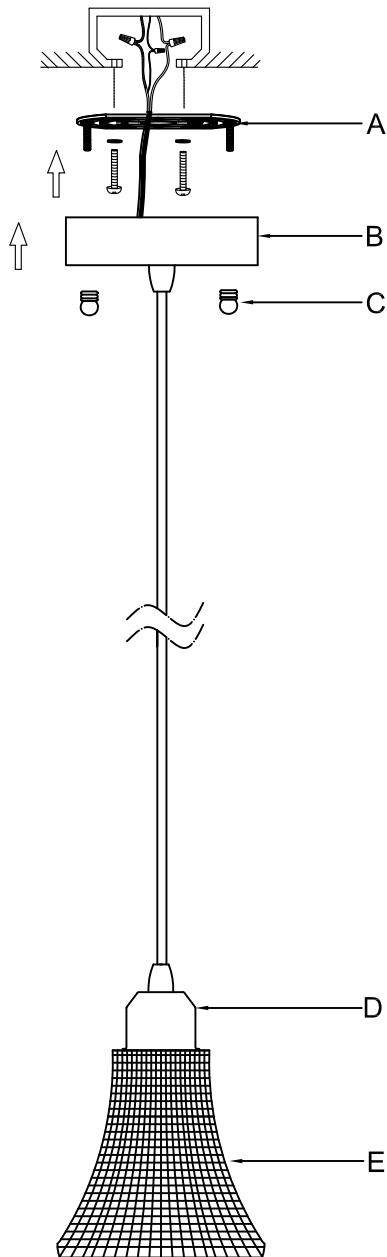


1.)

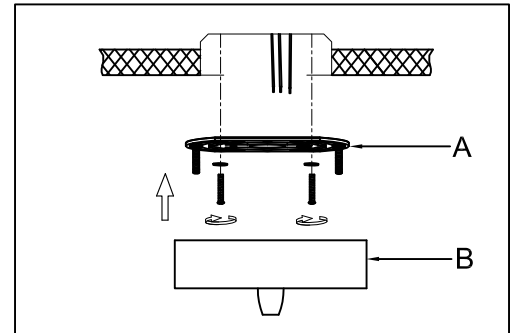


Step 1: Remove mounting bracket (A) from canopy (B) and install to electrical box.

2.)

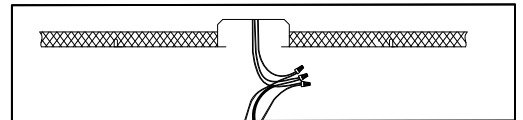

Step 2: Wire fixtures to wires in outlet box. Green wire is ground.

3.)

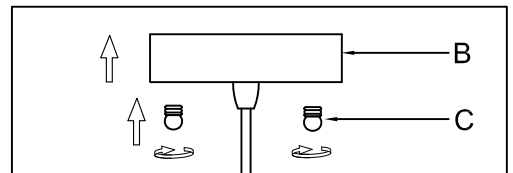

Step 3: Adjust wire length to desired mounting height and tighten strain relief screws to secure. Install canopy (B) to bracket using finials (C) to secure.

#### Cleaning & Care:

Clean with soft cloth and a mild detergent.  
Do not use abrasive cleaner.