




Contemporary Lighting

PRODUCT NAME: LARMES
ITEM NUMBER: E23121-18


Please consult your electrician for hanging fixture and wiring.

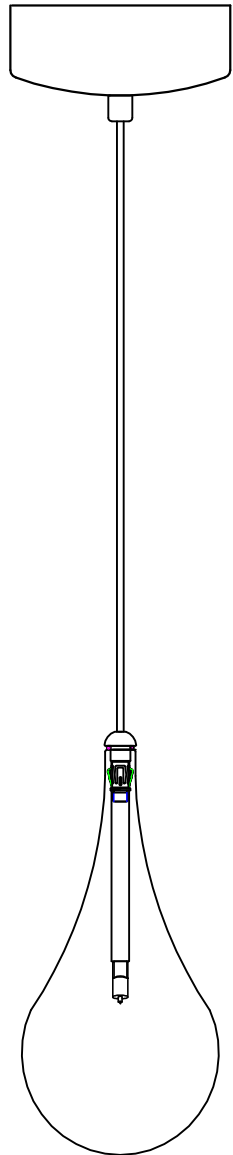



WARNING: Wires need to be connected to driver found in canopy and should not be connected directly to power source or a short may occur

Bulbs (Included): 1 x 1.5W G4 LED


IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

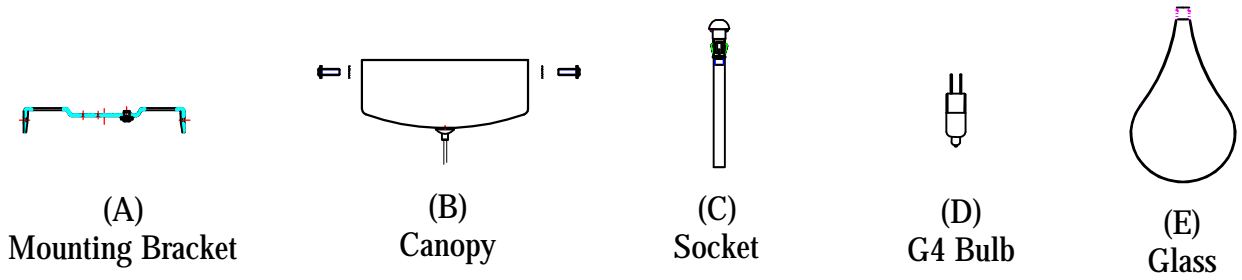


Locate all hardware & components before discarding packaging

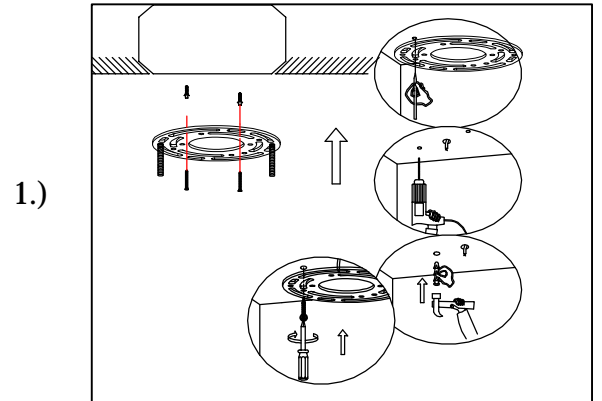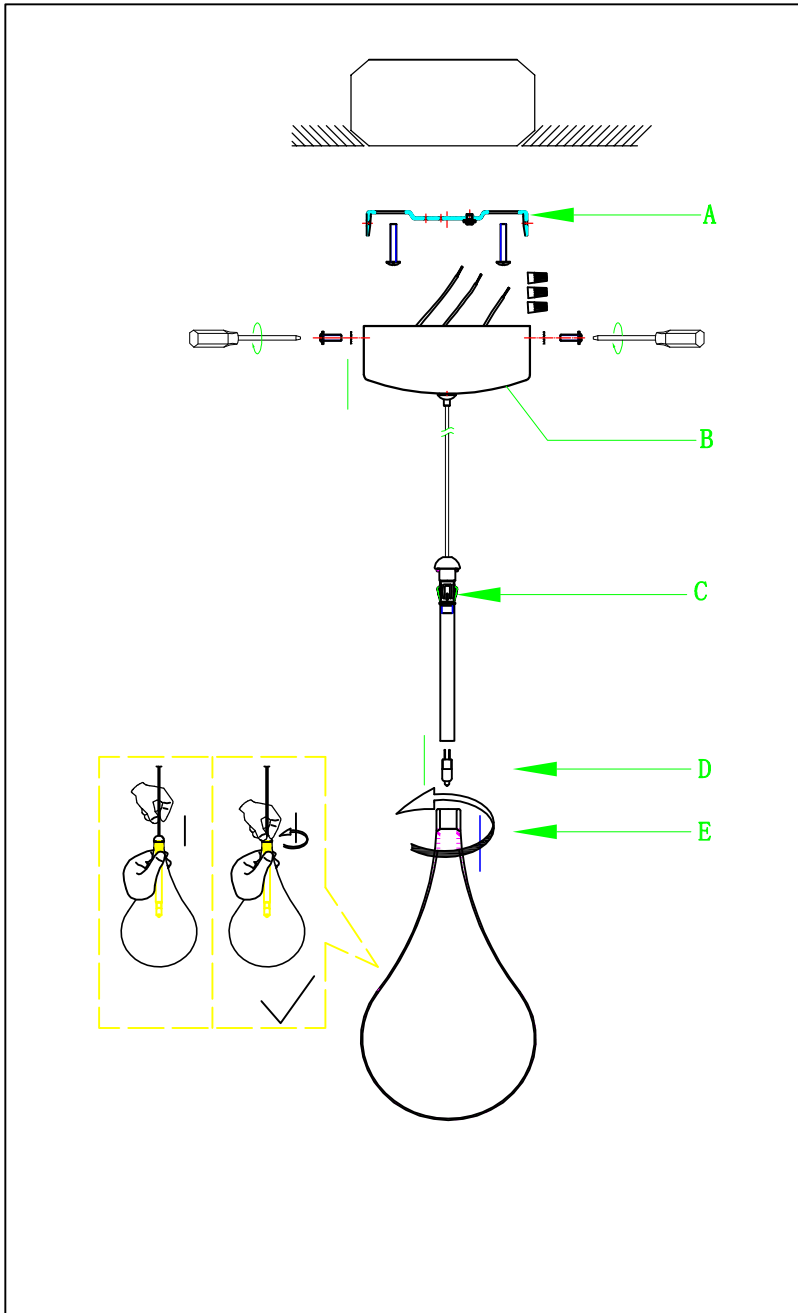

Step.1: Remove Mounting Bracket (A) from Canopy to install to electrical box

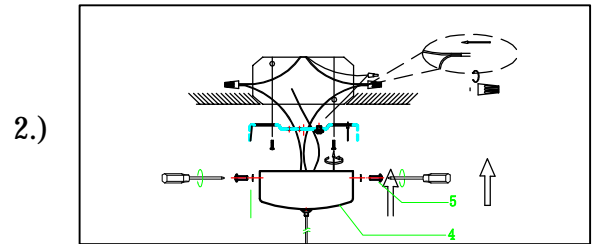

Step.2: Wire fixture to wires in outlet box. Green wire is for Ground. Secure canopy (B) to mounting bracket (A) using screws on the sides of the canopy.

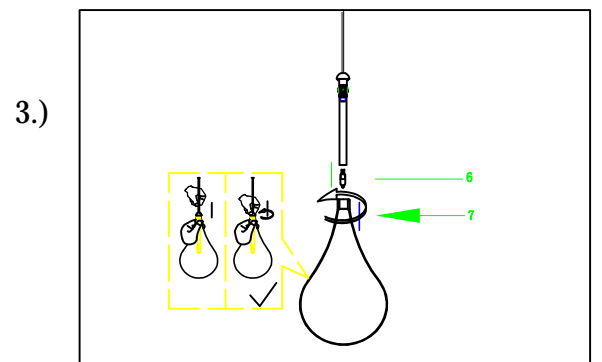

Step.3: Install G9 bulb (E) provided. Gently turn glass (F) onto socket (D) to secure.

Cleaning & Care:

Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.